

Frequently Asked Menu Setting Location Cheat Sheet FutureSmart 3, FutureSmart 4, and FutureSmart 5 Models

	FutureSmart 3	FutureSmart 4 and 5
Fax Send Confirmation	<p>*Done from Printer or EWS*</p> <p>FROM PRINTER</p> <ul style="list-style-type: none"> ▪ Administration ▪ Fax Settings ▪ Fax Send Settings ▪ Default Job Options ▪ Notification <p>FROM EWS</p> <ul style="list-style-type: none"> ▪ Fax ▪ Fax Send Setup ▪ Notification 	<p>*Must be done from EWS*</p> <ul style="list-style-type: none"> ▪ Fax ▪ Fax Send Setup ▪ Default Job Options ▪ Notification
Fax Receive Confirmation	<p>*Done from Printer or EWS*</p> <p>FROM PRINTER</p> <ul style="list-style-type: none"> ▪ Administration ▪ Fax Settings ▪ Fax Receive Settings ▪ Default Job Options ▪ Notification <p>FROM EWS</p> <ul style="list-style-type: none"> ▪ Fax ▪ Fax Receive Setup ▪ Notification 	<p>*Done from Printer or EWS*</p> <p>FROM PRINTER</p> <ul style="list-style-type: none"> ▪ Settings ▪ Fax ▪ Fax receive settings ▪ Default job options ▪ Notification <p>FROM EWS</p> <ul style="list-style-type: none"> ▪ Fax ▪ Fax Receive Setup ▪ Notification
Default Copy Image Adjustment Settings	<p>*Done from Printer or EWS*</p> <p>FROM PRINTER</p> <ul style="list-style-type: none"> ▪ Administration ▪ Copy Settings ▪ Image Adjustment <p>FROM EWS</p> <ul style="list-style-type: none"> ▪ Copy/Print ▪ Copy Settings ▪ Image Adjustment 	<p>*Must be done from EWS*</p> <ul style="list-style-type: none"> ▪ Copy/Print ▪ Copy Settings ▪ Default Job Options ▪ Image Adjustment
Clean Rollers Count Reset	<p>*Must be done from printer*</p> <ul style="list-style-type: none"> ▪ Device Maintenance ▪ Calibration/Cleaning ▪ Clean Rollers ▪ Reset 	<p>*Done from Printer in Service Mode*</p> <ul style="list-style-type: none"> ▪ Support Tools ▪ Service ▪ Type Service Mode Pin # ▪ Cycle Counts ▪ Clean Rollers Count
Fuser Mode Adjustment	<p>*Done from Printer or EWS*</p> <p>FROM PRINTER</p> <ul style="list-style-type: none"> ▪ Administration ▪ General Settings ▪ Print Quality ▪ Adjust Paper Types (select default) ▪ Print Mode <p>FROM EWS</p> <ul style="list-style-type: none"> ▪ Copy/Print ▪ Adjust Paper Types (select default) ▪ Modify (at bottom of screen) 	<p>*Done from Printer or EWS*</p> <p>FROM PRINTER</p> <ul style="list-style-type: none"> ▪ Settings ▪ Print (Copy/Print on MFP Models) ▪ Print Quality ▪ Adjust Paper Types (select default) ▪ Print Mode <p>FROM EWS</p> <ul style="list-style-type: none"> ▪ Copy/Print ▪ Print Quality ▪ Adjust Paper Types (select default) ▪ Modify (at bottom of screen)